

# M2™

Monitor Arm



# Positioning the Monitor

The M2 offers virtually effortless adjustment. Simply grasp the monitor and move it to the desired position. Use the following guidelines for ideal ergonomic positioning.

## 1 Height

Position the first line of text on the monitor at or just below eye level.

## 2 Distance

Position monitor at a comfortable distance from your eyes, approximately one arm's length away.



## 3 Angle

Tilt the top of the monitor away from you so your line of sight is perpendicular to it.


## 4 Alignment

Position the monitor so it's in line with the space bar of your keyboard and the centerline of your body.


The M2 also allows the monitor to be pushed out of the way to create extra space on the work surface or turned to promote collaboration with others.

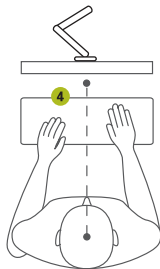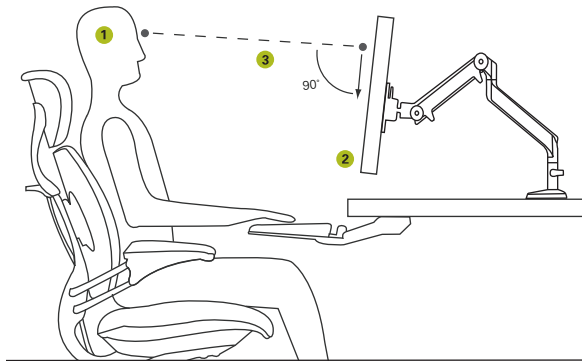


## Cable Management

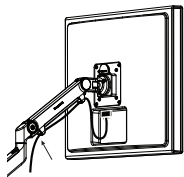


- 1 Route power and monitor cables through the cable clips on the M2's upper link.

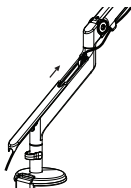


- 4 Place the plastic cover back onto the lower link and slide upward until it clicks into place.

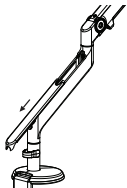

 - 2 Slide the plastic cover on the lower link downward until it disengages, then remove.




- 5 Remove the cable clip on the base stem then reattach over the cables to secure them in place.

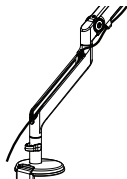

- 3 Route cables inside the lower link.



## Counterbalancing the Monitor

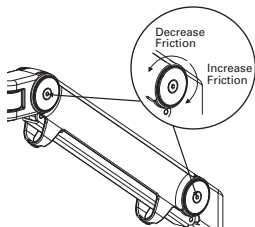

The monitor should be easy to move up and down and should stay in place once adjusted. If the monitor is difficult to adjust, or moves without assistance, it is not properly counterbalanced.

Use the provided hex key to turn the screws located within the half-dollar-size friction discs located on the side of the M2. Turn each screw counterclockwise to decrease friction when the monitor is difficult to adjust. Turn each screw clockwise to increase friction when the monitor will not stay in place. Be sure to apply approximately the same amount of rotation to each screw.

## Warranty

The following Warranty is in lieu of all other warranties express or implied, including, but not limited to, the implied warranty of merchantability and fitness for a particular purpose.

Humanscale warrants on the M2 monitor arm:

**15 years, 24/7 use: all components**

This Warranty is applicable to the initial purchaser only and is non-transferable. Humanscale warrants that, at the time of customer's acceptance, the product will be in good working order and will be free from defects in materials and workmanship. This does not apply to normal wear and tear or damage caused by accident, neglect, misuse, or improper installation or operation.

Humanscale will not be responsible for damage due to service, maintenance, modifications or tampering by anyone other than a Humanscale-authorized representative. In the event a product is defective and Humanscale receives written notice of the defect within the Warranty period, Humanscale, at its option, will either repair or replace the defective product. This Warranty does not cover damage caused by a carrier, or transportation of the product from one location to another, or alterations made by owner.

### Limitation of Liability

In no event will Humanscale be liable to purchasers for any special, collateral, incidental or consequential damages, however caused, whether by Humanscale's negligence or otherwise.

# Humanscale and the Environment

For all its advancements, the M2's most notable achievement is that it treads lightly where the environment is concerned.

- Few parts mean few manufacturing processes
- Light weight means minimal material to source, process, dispose of, and ship
- Slim profile enables less wasteful packaging
- Durable design means it won't need to be replaced for a very, very long time
- No gas cylinders, which are difficult to recycle
- 52% recycled content and 99% recyclable
- Contributes to valuable LEED-CI, -NC and -EB points



[www.humanscale.com](http://www.humanscale.com)